

MXOHO — Hardware Mounting & Adjustment Guide

Hinges · Drawer runners · Handles · Soft-close dampers · EN-V1.0 · 2026

1. Tools Required

35 mm Forstner bit / Cordless drill / PH2 / PZ2 drivers / Torque screwdriver / Spirit level / Marking template / PTFE dry spray

2. Hinge Installation & 3-Way Adjustment

- 1 Drill the 35 mm hinge cup at 3–5 mm from the door edge, depth 11.5 mm.
- 2 Screw the cup into the door; clip the mounting plate to the arm.
- 3 Fix the plate to the carcass side at the marked height.
- 4 **Depth:** front-to-back screw moves the door face. **Side:** cam screw sets the 2–3 mm gap. **Height:** loosen plate screws, level, retighten.

- 110° hinges for standard doors; 165° for corner and bi-fold applications.
- Soft-close dampers engage in the last 30–35° of travel — test with a gentle push.

3. Drawer Runner Installation

- 1 Fix cabinet runners level and parallel; a 0.5 mm error is visible over the drawer length.
- 2 Screw drawer runners to the drawer side at the marked line.
- 3 Insert the drawer and pull the runners to full extension to seat them.
- 4 Tune soft-close catch force if the runner supports it; test 20 full cycles.

4. Handle & Knob Mounting

- Drill from the front face with a backing board to prevent blow-out on laminates.
- Standard centres: 128 mm / 160 mm bar handles; 32 mm cabinet knobs.
- Torque M4 setscrews to snug plus a quarter turn — over-tightening strips board cores.

5. Lift-Up & Special Mechanisms

- Set stay-spring tension so the door stops open without bouncing.
- Follow the marked template for swing clearance — up-lift doors need headroom above the carcass.
- Test the full cycle 10 times and re-torque all base screws.

6. Service & Spare Parts

- Hinge and runner brands: DTC, Blum, Hettich, or your nominated OEM brand.
- Lifetime free repair & replacement for non-human damage — quote your order number when claiming.
- Keep two spare hinge cams and runner clips per kitchen on site for quick swaps.

7. Warranty Statement

- Wall paint & electrical circuits: 5 years warranty.
- Cabinet body: 3 years warranty.
- Hardware: lifetime free repair & replacement for non-human damage.
- Cabinet lights and electrical accessories: excluded from warranty.
- This warranty applies from the installation date and covers manufacturing defects only. Damage caused by incorrect installation, standing water, or use outside the specified indoor environment is not covered. Claims require photographs, the packing list and installation date.