

MXOHO — TV Cabinet & Sideboard Installation Manual

For MXOHO living / dining storage ranges · EN-V1.0 · 2026

1. Tools Required

Spirit level / Tape measure / Cordless drill / Screwdrivers / Rubber mallet / Stud finder / Cable ties / Appropriate wall anchors

2. Before You Start

- Check carton contents against the packing list; report transit damage within 7 days with photos.
- Assemble close to the final position — low cabinets are awkward to carry once built.
- Confirm wall type for anti-tip anchoring (drywall requires toggles into studs or structure).

3. Cabinet Assembly

1	Join side panels to the bottom board with cam locks and dowels.
2	Insert fixed shelves and the back panel; square before final locking.
3	Fit doors and drawer fronts loosely; final-align after the cabinet is placed.
4	Attach the plinth or legs; level in both directions.

4. Wall Anchoring (Anti-Tip)

1	Position the cabinet and mark the wall through the anti-tip bracket holes.
2	Drill and install anchors suited to the wall type.
3	Fix brackets to the cabinet top rear and to the wall; check for rock.

SAFETY: All tall or wall-hung units must be anchored. MXOHO is not liable for unanchored installations. A tipped cabinet can cause serious injury.

5. Wall-Mounted TV Units

1	Mark the mounting height; confirm the wall can carry the TV plus unit weight.
2	Fix the hanging rail into structural material only — never into hollow board alone.
3	Two-person lift: hang the unit, lock the rail screws, check level.
4	Route cables through the supplied grommets before final tightening.

6. Cable Management & Finishing

- Use the rear cable channel; keep low-voltage cables separate from mains.
- Leave 50 mm behind AV equipment for ventilation.
- Adjust all door gaps to an even 2–3 mm; run drawers through a full cycle.
- Wipe surfaces with a dry cloth; never flood panels with water.

7. Warranty Statement

- Wall paint & electrical circuits: 5 years warranty.
- Cabinet body: 3 years warranty.
- Hardware: lifetime free repair & replacement for non-human damage.
- Cabinet lights and electrical accessories: excluded from warranty.
- This warranty applies from the installation date and covers manufacturing defects only. Damage caused by incorrect installation, standing water, or use outside the specified indoor environment is not covered. Claims require photographs, the packing list and installation date.